


Micro Chlorine Tester and Sanitizing Solution CM-240

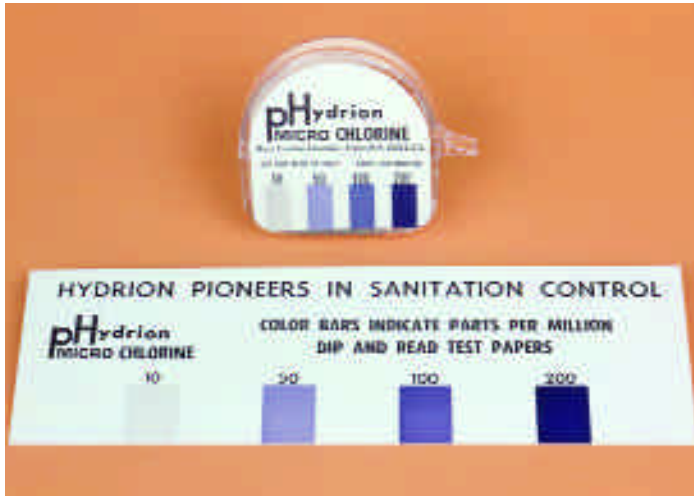

The standard for the Sanitizing and Health Industry. Hydrion test papers are in use worldwide. Approved by Federal, State and Local agencies.

- **SIMPLE, QUICK AND ACCURATE JUST DIP AND COMPARE TO THE COLOR CHART.**

This Chlorine Tester is made with an improved test paper that gives instant readings with chlorine sanitizing solutions. It is supplied in the convenient Hydrion Dispenser that protects the paper and at the same time allows the user to tear off strips of any desired length.

When the test paper is dipped into the sanitizing solution, it produces an immediate color reaction. This color is matched at once to the color chart for a reading of the chlorine strength. The match points on the color chart indicate 10-50-100-200 ppm of free available chlorine.

Quaternary Ammonium Tester and Sanitizing Solution QT-10



The Most Widely Used Test Paper in its Field!
HYDRION QT TEST PAPER

For determining the concentration of Quaternary Ammonium Compounds in the range of 100 to 400ppm.

- **THE QT TEST PAPER WORKS BEST IN NON-ALKALINE QUATS**

Users of quaternary sanitizers are expected to have on hand a test procedure to show that their solutions have the proper and effective concentrations required. These kits will provide on site and immediate verification of the strength of the sanitizing solution. The quat testers will also detect exhaustion of solutions that should be replaced and will avoid the use of excessive and wasteful amounts of quat compound.

Ordering Information

ITEM	DESCRIPTION
CM-240	Micro Chlorine tester (Carton of 20 rolls)
CMR-245	Micro Chlorine Refill (50 rolls)

Ordering Information

ITEM	DESCRIPTION
QT-10	10 Roll Alky/dimethylbenzyl ammonium
QT-20	10 Roll for Hyamine
QT-30	10 Roll Didecyl Dimethyl
QTR-10	Refill for QT-10 (5 Rolls)
QTR-20	Refill for QT-20 (5 Rolls)
QC-1000	0-1000 High Range (10 Rolls)
QKR-1000	0-1000 Refill (5 Rolls)

